SMART / WORKSTATION SINK

Smart Waterfall (30 x 18 x 09) Inch 304 Stainless Steel Kitchen Sink Black

30 × 18 × 09 in · Black

Model **FHS-WF1**



Scan for the product page, videos and spare parts

Please read this manual before installing and keep it for future reference.

Edition 1 · November 2026

Contents

1. Safety first
2. Know your product
3. What is in the box
4. Specifications
5. Installation
6. How to use
7. Care and cleaning
8. Troubleshooting
9. Warranty and support

1 Safety first

> **Important** Read these points before you start. Ignoring them can cause injury, leaks or damage that the warranty does not cover.

- ✓ Turn off the water supply before you start, and keep it off until all joints are tight.
- ✓ We recommend installation by a qualified plumber.
- ✓ Wear gloves. Cut steel edges and stone edges can be sharp.
- ✓ Lift heavy items with two people.
- ✓ Before drilling or cutting, check for hidden pipes and electric wires.
- ✓ Do not stand or sit on sinks or basins, and do not let children hang on faucets or accessories.
- ✓ Only connect an RO tap to purified water for drinking. Do not drink from other outlets unless your supply is safe.

2 Know your product

This manual explains how to install, use and look after your Fossa smart / workstation sink. Keep it with your invoice.

Material & thickness
304-grade stainless steel, having a thickness of 1.2mm, this sink is incredibly durable and highly resistant to impact and will provide structural stability when used regularly in the kitchen.

Finish & aesthetics
This sink features a matte finish which enhances the overall appearance of your kitchen while providing resistance to staining, fading and water damage.

Single bowl design
With a large, open bowl design, this sink allows you to wash large pots and pans, cookware, and food items in one location, enabling you to work quickly and efficiently.

Integrated pull-out faucet
Equipped with an extendable pull-out faucet, enabling you to reach all areas of the sink while washing and rinsing faster and conveniently filling large pots or containers with water.

Ro tap for purified water
This sink has an integrated purified water tap that makes it easy for you to access all of your drinking water directly from the tap.

Waterfall system
The built-in waterfall spout delivers a wide, even spray of water that helps you wash and clean items faster, which results in a more efficient cleaning experience.

Built-in soap dispenser
This sink has a built-in liquid soap dispenser that helps you keep your countertops organised and provides quick access to your soap.

Easy maintenance
Designed to resist rust, stains, and water marks, ensuring the sink looks clean and fresh with minimal effort.

3 What is in the box

1. 1 × Sink-Bowl
2. 1 × Stainless Steel Sink Coupling
3. 1 × PVC Waste Pipe
4. 1 × Mixer Tap
5. 1 × Cup Washer
6. 1 × RO Tap
7. 1 × Soap Dispenser
8. 1 × Chopping Board
9. Drain Basket
10. 1 × Strainer Basket
11. Pipe Connections
12. Drainage Pipes

4 Specifications


Model / SKU	FHS-WF1
Product type	Smart / workstation sink
Overall size	30 × 18 × 09 in
Material	304-grade stainless steel
Thickness	1.2mm
Colour / finish	Black
Counter cut-out	Ask Fossa support for the exact cut-out size before cutting the counter
Shipping weight	9.3 kg

5 Installation

> Fit the faucet and any deck fittings (RO tap, soap dispenser, cup washer) to the sink before the sink goes into the counter. It is much harder to reach the nuts afterwards.


Tools you will need

- Measuring tape and pencil
- Jigsaw (for a new cut-out)
- Neutral-cure silicone and gun
- Adjustable spanner
- PTFE (Teflon) tape
- Bucket and cloth

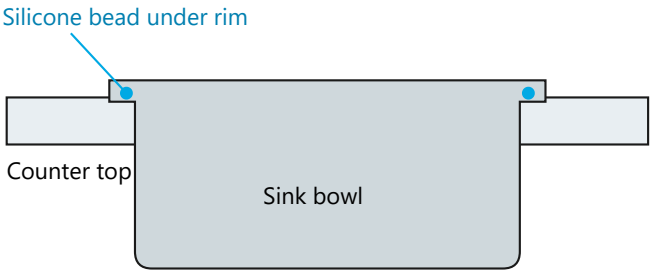


Top-mount, cross-section · not to scale

1. **Unpack and check** Lay every part on a soft cloth and tick it off against "What is in the box". Contact us before installing if anything is missing or damaged.
2. **Prepare the cut-out** Mark the cut-out on the counter using the size in the Specifications table, then cut it. In an existing kitchen, check the old cut-out matches.
3. **Fit the deck parts** Fit the faucet and every deck fitting supplied into its hole on the sink deck. Tighten the nuts from below.
4. **Fit the drain coupling** Seat the coupling with its rubber washer in the drain hole and tighten the lock nut by hand, then a little more with a spanner.
5. **Seal and set the sink** Run a continuous bead of silicone under the sink rim. Lower the sink into the cut-out, press it down evenly and wipe away extra silicone.
6. **Connect the water** Connect the hot hose to the hot (left) angle valve and the cold hose to the cold (right) valve. Wrap PTFE tape on threaded joints. If an RO tap is supplied, connect it to your purifier outlet.
7. **Connect the waste** Push the waste pipe onto the coupling and run it to the drain. Connect the side overflow pipe if fitted.
8. **Test for leaks** Open the valves slowly and run every outlet. Fill the bowl, let it drain and check every joint is dry. Leave the silicone 24 hours before heavy use.

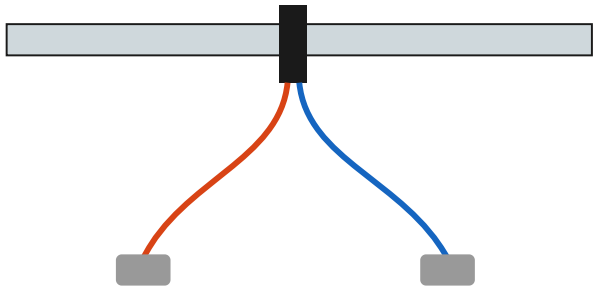

Supply hoses, hand-tight + ¼ turn · not to scale

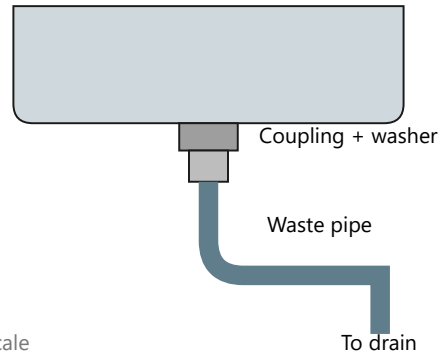

Not to scale

6 How to use

Faucet and waterfall

1. Use the switch or knob on the deck to send water to the faucet or to the waterfall outlet.
2. Set the temperature with the faucet lever: move it towards hot or cold.
3. Pull the spray head out to rinse any corner of the bowl, then let it go gently back.

Workstation accessories

1. Slide the chopping board, basket or tray along the ledges inside the bowl.
2. Keep the strainer in the drain so food does not enter the waste pipe.

7 Care and cleaning

- ✓ To keep your sink looking great, always clean it with mild soap and warm water.
- ✓ Never use bleach or abrasive-type products that could damage the finish.
- ✓ Daily cleaning should be done with a soft sponge or towel to prevent scratching.
- ✓ Be sure to promptly dry after each use to prevent water spots and minerals from building up.
- ✓ Regularly check the drain area and X-grooves to ensure that water is flowing properly.

8 Troubleshooting

Problem	Likely cause	What to do
Weak flow from faucet or waterfall	Low supply pressure, or a blocked aerator.	Clean the aerator. If house pressure is low, fit a pressure pump.
Water comes out of the wrong outlet	Switch is between positions.	Turn the switch fully to one side.
Leak under the sink	Loose hose or coupling nut.	Close the angle valves and hand-tighten the nut a quarter turn more. Do not overtighten.
Water drains slowly	Food in the strainer or coupling.	Empty the strainer basket and clear the coupling.

9 Warranty and support

Sink Bowl	7 years against manufacturing defects
All Accessories	1 year against manufacturing defects
Return or replacement	Within 10 days of delivery for damage, defect or wrong product

How to make a claim

1. Keep your invoice or order number. It is your proof of purchase.
2. Take clear photos or a short video of the problem, and a photo of the product label or SKU.
3. Contact us by WhatsApp, phone or email with your order number and the photos.
4. Our team checks the claim and arranges a repair, part or replacement.

The warranty does not cover

- Damage from wrong installation, misuse, accidents, or dropping the product.
- Damage from harsh chemicals, abrasive cleaners or very hard water left on the surface.
- Normal wear, such as worn washers, and scratches from daily use.
- Products changed or repaired by someone other than Fossa.

Chat on WhatsApp

Fossa customer support

WhatsApp / phone +91 98113 21235
Landline 011-6926 8726
Email support@fossahome.com
Hours Monday to Saturday, 10 AM to 7 PM
Web www.fossahome.com

© 2026 Fossa Home. Product photos are for illustration. Diagrams are not to scale. Fossa may improve products without notice.